



User Manual

Model: Breezy Link (SKU: BLNK01)

With Bluetooth® Wireless Technology



Manufacturer and Contact Information

Manufacturer: Build With Robots

Address: 429 Commercial Street NE
Albuquerque, NM 87102

For product information, sales, service, and technical support:

<https://buildwithrobots.com/>

Customer Support Phone: (833) 273-3991

Email: info@buildwithrobots.com

This manual covers model: Breezy Link (BLNK01)

SPECIFICATIONS:

Voltage: 5V, Includes USA 100-240VAC/50-60 Hz wall-mount power adapter and 2 meter USB cable

Amps: 2A at 5VDC



Environmental Considerations

This section provides information about the environmental impact of the product.

Product End-of-Life Handling

Observe the following guidelines when recycling an instrument or component:

Equipment recycling. Production of this device required the extraction and use of natural resources. The device may contain substances that could be harmful to the environment or human health if improperly handled at the product's end of life. To avoid the release of such substances into the environment and to reduce the use of natural resources, we encourage you to recycle this product in an appropriate system that will ensure that most of the materials are reused or recycled appropriately. It is recommended that this device be taken to a certified Waste Electronic and Electrical Equipment recycler.



Do not throw in trash at end of product life.



Contents

Manufacturer and Contact Information	2
Environmental Considerations.....	3
General Information	5
Service Information.....	5
Before Unpacking.....	5
Contents Included:	6
Product Overview	7
Breezy Link hardware Installation.....	8
Installation Requirements.....	8
Powering Breezy Link ON and OFF.....	8
Create or log into Breezy Cloud account	9
Login to existing account	9
Create new account	9
Create Site.....	10
Connect Breezy Link to Breezy Cloud	10
Using a permanent ethernet connection.....	10
Using a temporary ethernet connection to setup Link WI-FI	11
Using Breezy Smart Controller to setup Breezy Link WI-FI.....	13
Add Breezy Link to Site	14
Add Breezy Blue devices to Site	16
Creating a group - optional	18
Setup notifications - optional.....	20
Add other Breezy devices to site	20
Regulatory information.....	21
LIMITED WARRANTY (USA/CANADA).....	22

Keep this user manual in a readily accessible location



General Information

The Build With Robots Breezy Link™ is a Gateway that connects other Breezy devices to Breezy Cloud™. Breezy Cloud can be accessed in a Web browser and is used to setup devices, monitor device data, and setup device notifications.

Item	Specification
SKU	BLNK01
Bluetooth connectivity	Bluetooth v5.2 (BLE)
Wi-Fi connectivity	WLAN 2.4G/5G (802.11a/b/g/n/ac)
Ethernet connectivity	10/100 Mbps, CAT-5/CAT-5E, POE compatible, includes 3-foot cable
Supported smart devices	Breezy Blue™ & Breezy Sense™
Breezy Cloud™ interface	Bidirectional communication for Breezy Cloud™ data interface
Breezy Cloud™ data & dashboard features	Breezy Blue™: fogging history, status, tank level Breezy Sense™: disinfection dosage, indoor air quality & environmental data, occupancy
AC power	USA 100-240VAC/50-60 Hz, wall-mount adapter with 6-foot cable
POE power	44 to 57 V
Size	3.74 in. x 3.74 in. x 1.18 in.
Temperature range	0 °C to 55 °C operating, -40 °C to 65 °C storage
Certifications	FCC, CE

Service Information

The product contains no serviceable parts and should not be disassembled, repaired, or modified by anyone other than the manufacturer or approved technicians.

Before Unpacking

Inspect the package carton for external damage. If the carton is damaged, notify the carrier.

Remove the device from its package and check that it has not been damaged in transit. Verify that the carton contains the device and contents listed below.



Contents Included:

- 1x 2 meter USB A to C cable**
- 1x 1 meter Ethernet cable**
- 1x USA AC power adapter**
- 1x Breezy Link**
- 1x Package mounting hardware**
- 1x Breezy Link quick start guide**

The appearance or components of the product may differ depending on the model. If anything is missing, please contact Build With Robots.



Product Overview



1. Red LED: Power indicator
2. Green LED: WI-FI / ethernet network connection indicator
3. Blue LED: Breezy Cloud connection indicator
4. Removable bottom cover
5. Bottom cover retention screw
6. Type-C power cable connection
7. Ethernet cable connection



Breezy Link hardware Installation

Installation Requirements

- Install Breezy Link on a shelf or mount on a wall in a centralized location where Breezy Link will be within 60 feet of other Breezy devices and will be less than 6 feet from an electrical outlet – operating range may vary due to wall thickness and materials.
- If building is larger than can be accommodated with one Breezy Link, additional Breezy Links can be added to the site.

Powering Breezy Link ON and OFF




1. Remove Breezy Link bottom cover by loosening screw and sliding the cover rearward.
2. **Power On.** Connect the USB cable to the Type-C connector on the bottom of the unit and connect the other end of the cable to the AC power adapter. Plug the AC power adapter into a powered wall outlet. The power indicator on the Breezy Link will turn red indicating that the device is powered on.
3. **Power Off.** Disconnect the USB cable from the connector on the bottom of the unit or unplug the AC power adapter from the wall outlet to power off.



Create or log into Breezy Cloud account

Login to existing account


1. If you already have an existing account, login to the account at <https://cloud.buildwithrobots.com/>

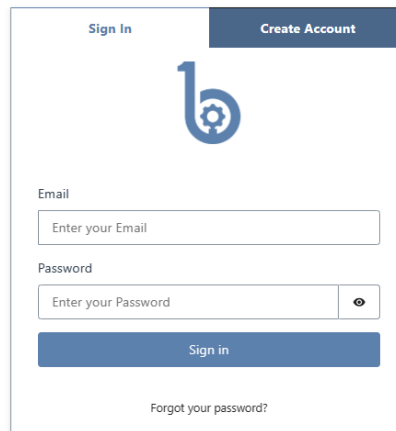

The screenshot shows the login interface for Breezy Cloud. At the top, there are two tabs: "Sign In" (selected) and "Create Account". Below the tabs is the Breezy Cloud logo, a stylized blue 'b' with a gear inside. Under the logo, there are two input fields: "Email" with the placeholder text "Enter your Email" and "Password" with the placeholder text "Enter your Password" and a toggle icon. Below these fields is a blue "Sign in" button. At the bottom, there is a link that says "Forgot your password?".

Create new account


1. To create a new account, navigate to <https://cloud.buildwithrobots.com/> and enter your email address and a password of your choice. After reading the End-User License agreement and agreeing to the terms, press the Create Account button.

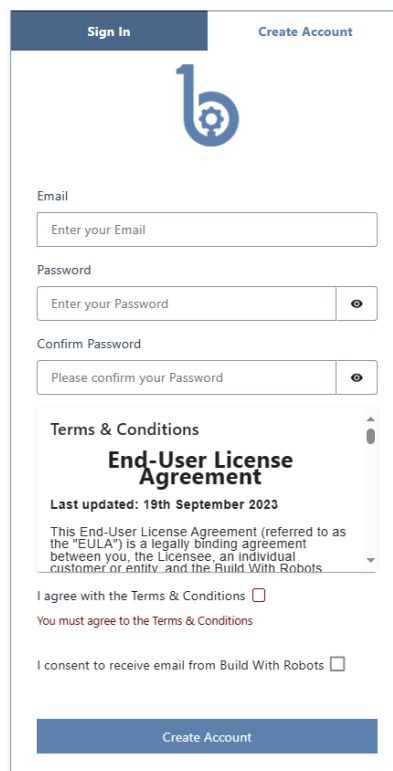

The screenshot shows the account creation interface for Breezy Cloud. At the top, there are two tabs: "Sign In" and "Create Account" (selected). Below the tabs is the Breezy Cloud logo, a stylized blue 'b' with a gear inside. Under the logo, there are three input fields: "Email" with the placeholder text "Enter your Email", "Password" with the placeholder text "Enter your Password" and a toggle icon, and "Confirm Password" with the placeholder text "Please confirm your Password" and a toggle icon. Below these fields is a section titled "Terms & Conditions" with a sub-header "End-User License Agreement" and a date "Last updated: 19th September 2023". The text of the agreement is partially visible: "This End-User License Agreement (referred to as the 'EULA') is a legally binding agreement between you, the Licensee, an individual customer or entity and the Build With Robots". Below the text are two checkboxes: "I agree with the Terms & Conditions" and "I consent to receive email from Build With Robots". Below these checkboxes is a blue "Create Account" button.




2. Enter the code that was sent to your email address in the Confirmation Code box and press the Confirm button to finish account creation.

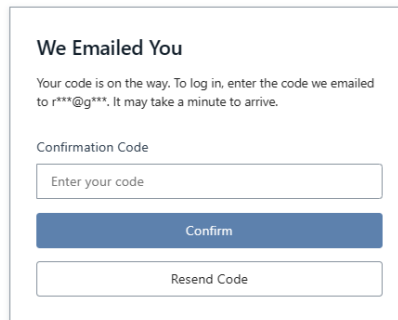

The image shows a web interface titled "We Emailed You". Below the title, it says "Your code is on the way. To log in, enter the code we emailed to r***@g***. It may take a minute to arrive." There is a text input field labeled "Confirmation Code" with the placeholder text "Enter your code". Below this field is a blue button labeled "Confirm". At the bottom of the form is a link labeled "Resend Code".

Create Site

1. New accounts that haven't been invited to an existing site, need to create a new site as shown on the screen below. Type the name of the new site into the Site Name field and press the Create Site button. Site names are commonly company, campus, or personal names and can be changed later.

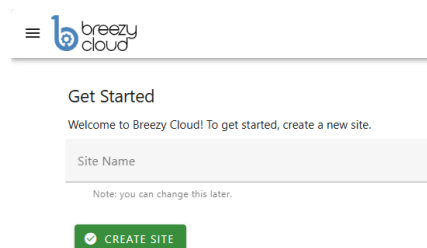

The image shows a web interface for "Breezy Cloud". At the top is the Breezy Cloud logo. Below it is the heading "Get Started" and the text "Welcome to Breezy Cloud! To get started, create a new site." There is a text input field labeled "Site Name". Below this field is a note: "Note: you can change this later." At the bottom is a green button with a checkmark icon and the text "CREATE SITE".

Connect Breezy Link to Breezy Cloud

Power on the Breezy Link as described in the **Powering Breezy Link ON and OFF** section above. Breezy Link can be connected to Breezy Cloud in the three ways described below. Choose the scenario that best fits your needs. Any WI-FI or ethernet connection used for Breezy Link must be able to connect to the internet without a website login.

1. Using a permanent ethernet connection
2. Using a temporary ethernet connection to setup Link WI-FI
3. Using Breezy Smart Controller to setup Breezy Link WI-FI


Using a permanent ethernet connection

1. Plug the ethernet cable into the ethernet connector on the bottom of Breezy Link and into an active ethernet connection that has internet access.
2. Add the Breezy Link to the site (see Add Breezy Link to Site section below)
3. If the ethernet connection is active, all three indicators on Link should be illuminated (blue, green, and red) and the Breezy Link will be visible on the Breezy Cloud site.




Using a temporary ethernet connection to setup Link WI-Fi

1. Plug the ethernet cable into the ethernet connector on the bottom of Breezy Link and into an active ethernet connection that has internet access.
2. Add the Breezy Link to the site (see Add Breezy Link to Site section below)
3. If the ethernet connection is active, all three indicators on Link should be illuminated (blue, green, and red) and the Breezy Link will be visible on the Breezy Cloud site.
4. Navigate to the Breezy Link list on the devices page in Breezy Cloud.
5. Press the *Settings* button for the Breezy Link to be configured

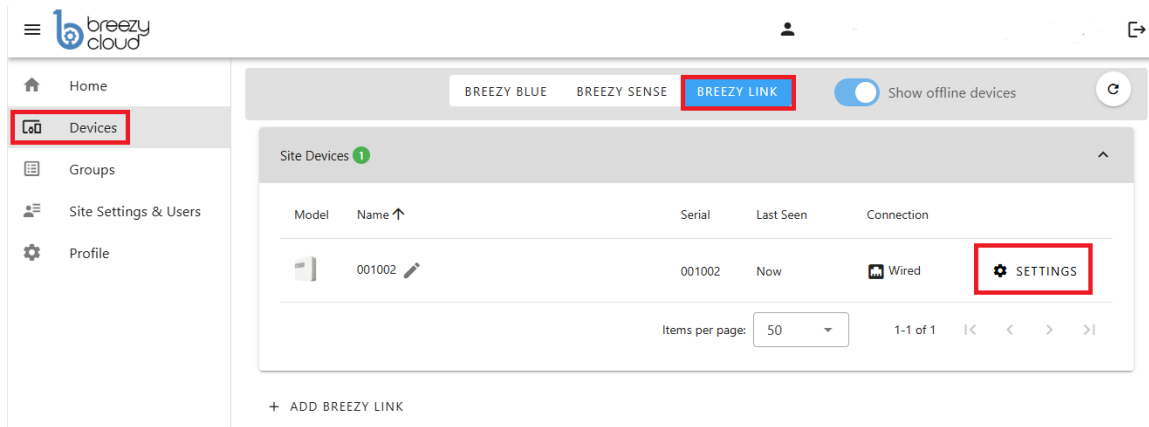

6. Press the *CONFIGURE WI-FI* button.

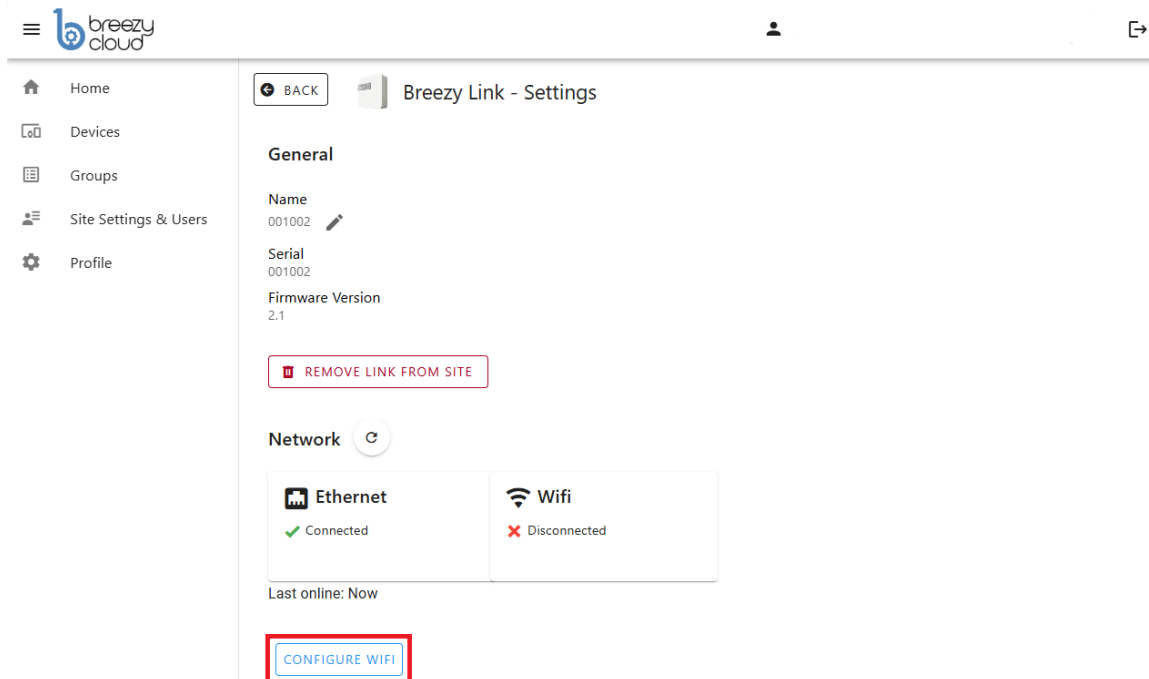

7. Select the appropriate WI-FI network from the drop-down list and enter the WI-FI password in the password field, then press the **CONNECT** button.

The screenshot shows the 'Breezy Link - Settings' page. On the left is a sidebar with links: Home, Devices, Groups, Site Settings & Users, and Profile. The main content area has a 'General' section with fields for Name (001002), Serial (001002), and Firmware Version (2.1). Below this is a 'REMOVE LINK FROM SITE' button. The 'Network' section shows 'Ethernet' as 'Connected' and 'Wifi' as 'Disconnected'. A red box highlights the 'Select a Wifi network' dropdown menu (showing 'GL-AR750-847'), the 'Wifi Password' field, and the 'CONNECT' button.

8. The screen will show both Wifi and ethernet are successfully connected.


The screenshot shows the 'Breezy Link - Settings' page after successful connection. The 'Ethernet' status remains 'Connected'. The 'Wifi' status is now 'Connected' and displays 'Network: BWR_GUEST'. The 'CONNECT' button has been replaced by 'CONFIGURE WIFI' and 'FORGET WIFI' buttons. The 'Last online: Now' status is shown at the bottom of the network section.




9. The ethernet cable can be disconnected and the Breezy Link will continue to operate using WI-Fi. All three indicator lights Breezy Link will remain on.

Using Breezy Smart Controller to setup Breezy Link WI-Fi


1. Sign in to the Breezy Smart Controller using your cloud.buildwithrobots.com account.
2. Press the Breezy Link button

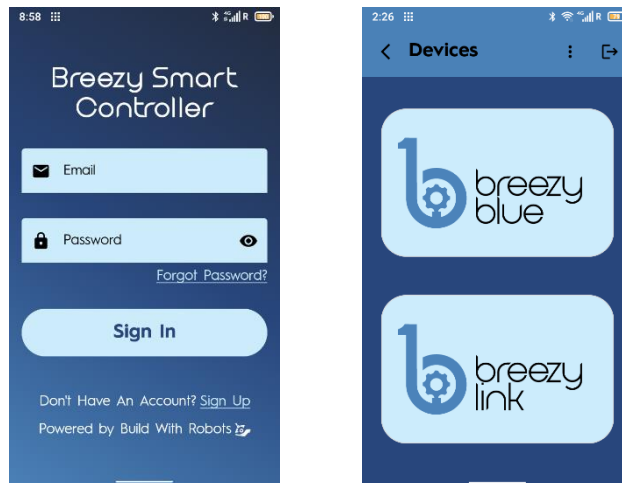

3. Select the Breezy Link to be connected to Wi-Fi from the list and accept pairing.
4. On the device control page, press the Configure Wifi button.

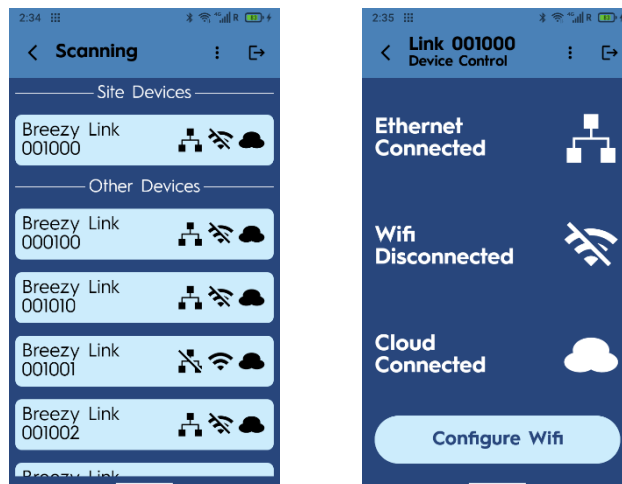


5. Select the Wifi network and enter the wifi password. In the bottom field, enter the code shown on the label on the rear of the Breezy Link

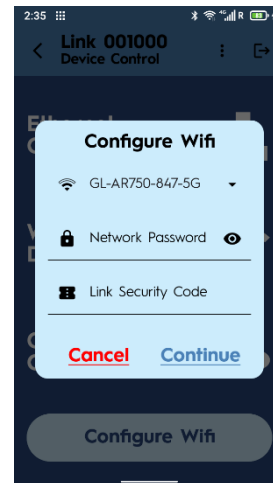

6. When Breezy Link is connected to Breezy Cloud using ethernet or Wifi, all three lights on Breezy Link will be illuminated.
7. Add the Breezy Link to the site as described in the next section.

Add Breezy Link to Site


1. Add a Breezy Link to the new site by navigating to *Devices*, then selecting *BREEZY LINK* and finally pressing *+ ADD BREEZY LINK*.

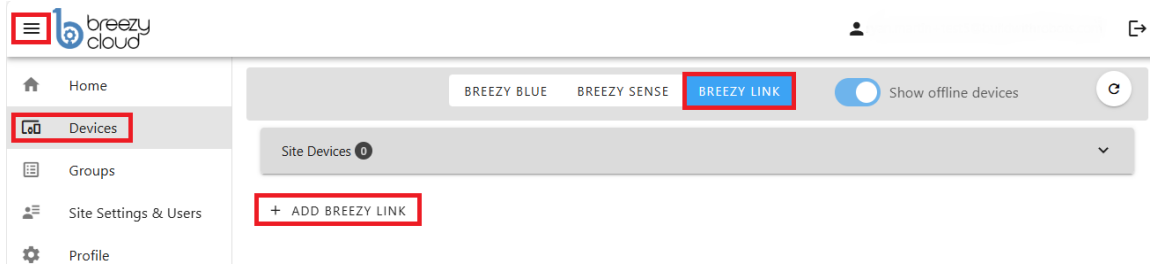




2. Enter the serial number and code information shown on the Breezy Link label into the appropriate text fields (S/N = serial number).













 Home

 Devices

 Groups

 Site Settings & Users

 Profile

ryan5

Setup a Breezy Link

Add a new Breezy Link to your site. Enter the serial number and code from the label on your Breezy Link.

Serial Number


Found on the label on your Breezy Link (S/N)

Code

Found on the label on your Breezy Link

Name

Optional: name for this Breezy Link


 ADD BREEZY LINK

3. Repeat 1 and 2 to add additional Breezy Links to the site.



Add Breezy Blue devices to Site

1. Provide power to all the Breezy Blue devices to be configured.
2. Log into breezy cloud <https://cloud.buildwithrobots.com/>
3. Navigate to the Breezy Blue list on the devices page in Breezy Cloud.

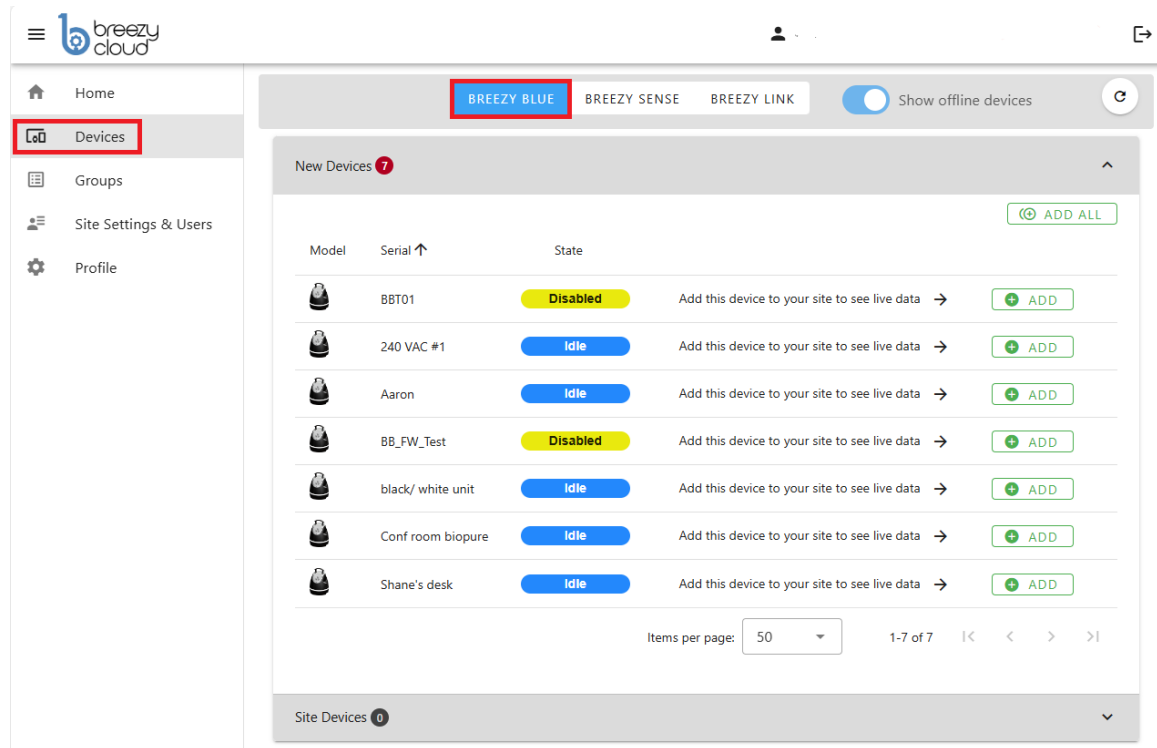

4. All the powered-on Breezy Blue units within range of the Breezy Link will be shown in the New Devices list. Note that the information in the "Serial" column will by default be the serial number shown on the bottom label of the Breezy Blue unit and can later be changed to user defined names as shown.
5. Press the **ADD ALL** button to add all the devices shown to the site or add only certain devices to the site by selecting the **ADD** button for each device.



6. In the case below, all the devices were added to the site and the screen shows they are "Site Devices" now.

The screenshot shows the Breezy Cloud web interface. On the left is a sidebar with navigation links: Home, Devices, Groups, Site Settings & Users, and Profile. The 'Devices' link is selected. The main content area has a top bar with tabs for 'BREEZY BLUE', 'BREEZY SENSE', and 'BREEZY LINK', along with a 'Show offline devices' toggle and a refresh button. Below this, there are two expandable sections: 'New Devices' (0) and 'Site Devices' (7). The 'Site Devices' section is expanded, showing a table of 7 devices. Each row includes a device icon, name, state (Disabled or Idle), tank level (Low or Full), version, signal strength, last seen time, and a 'VIEW' button. At the bottom of the table, there is a pagination control showing 'Items per page: 50' and '1-7 of 7'.


Model	Name ↑	State	Tank Level	Version	Signal	Last Seen	
	BBT01	Disabled	LOW	14		Now	VIEW
	240 VAC #1	Idle	LOW	26		Now	VIEW
	Aaron	Idle		26		Now	VIEW
	BB_FW_Test	Disabled		26		Now	VIEW
	black/ white unit	Idle		26		Now	VIEW
	Conf room biopure	Idle		26		Now	VIEW
	Shane's desk	Idle	LOW	26		Now	VIEW

7. The data for each device may now be viewed by pressing the VIEW button next to the device.




Creating a group - optional


1. By Default, a group is created including all site devices. If you want to create a group of a subset of the site devices, navigate to the *Groups* screen and press + *CREATE GROUP*

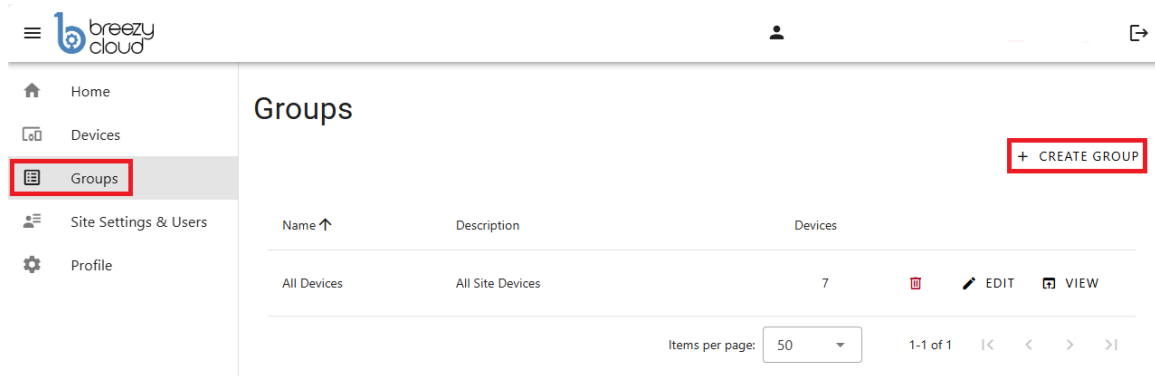

2. Name the group, select the devices and press the *CREATE GROUP* button

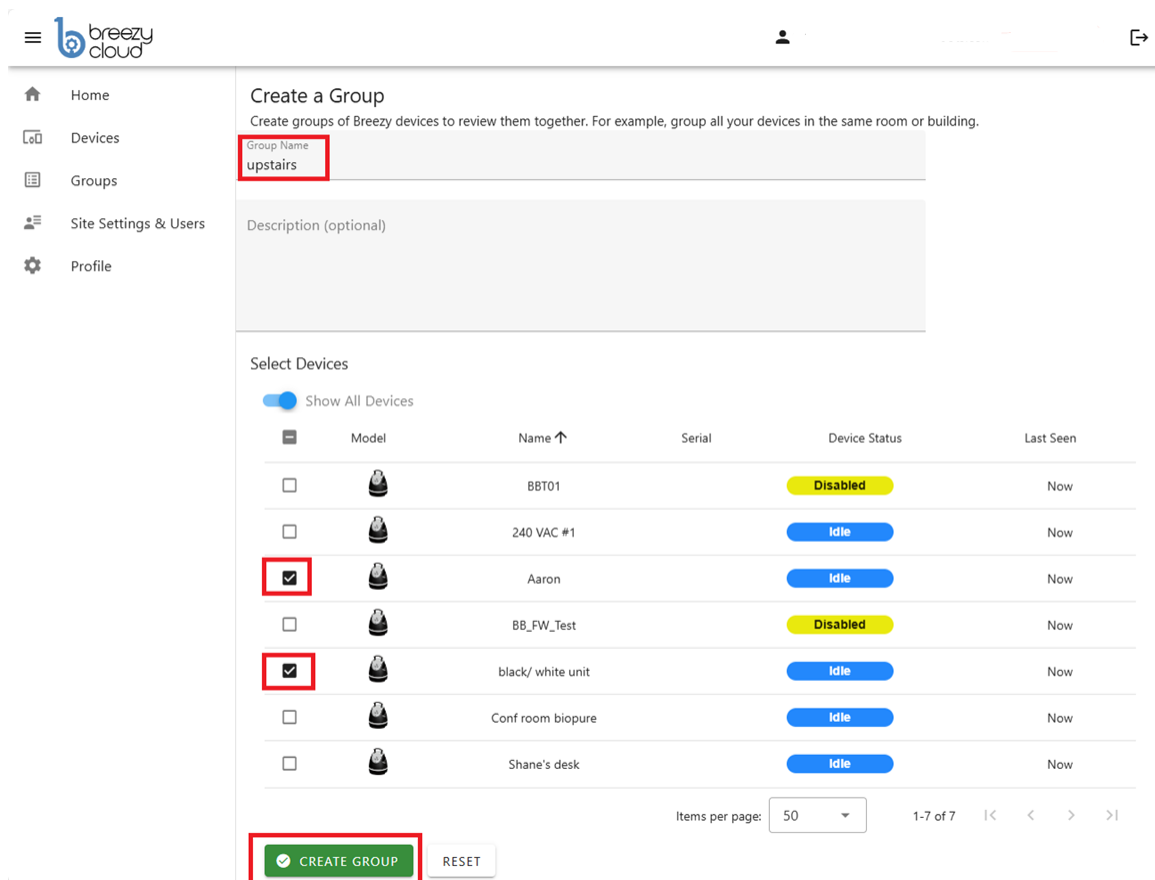


3. The new group will be visible on the Groups page and the data for these devices can be viewed by pressing the *VIEW* button for the group.

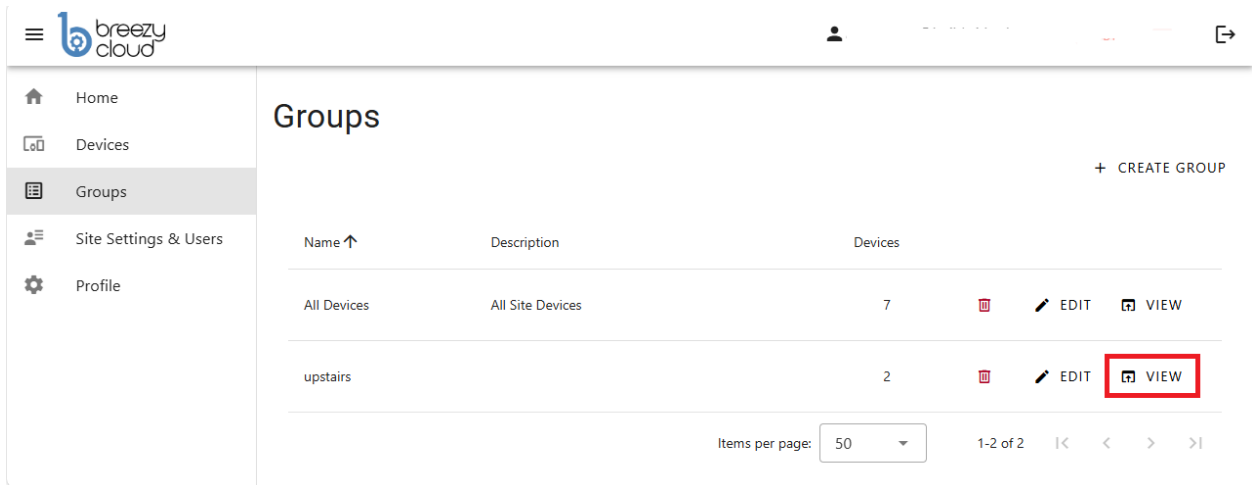

Name ↑	Description	Devices			
All Devices	All Site Devices	7		EDIT	VIEW
upstairs		2		EDIT	VIEW

4. Information such as historic tank levels, current tank level, and fogging history logs can be viewed from this screen

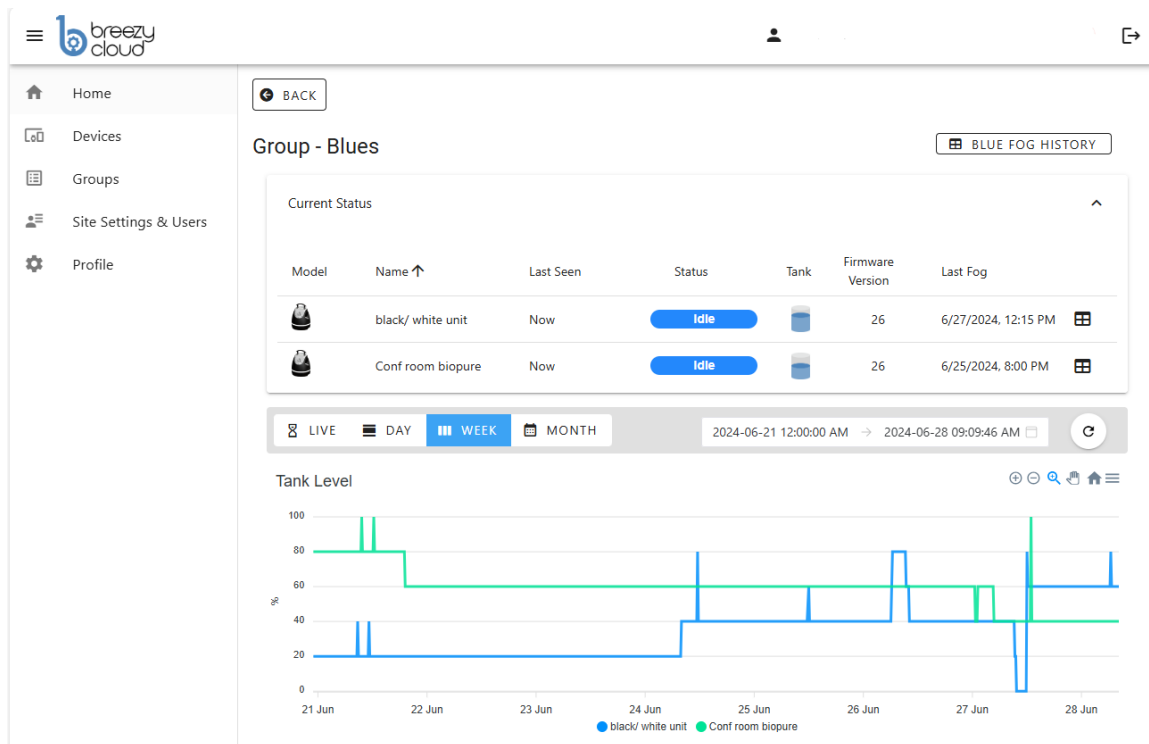

Model	Name ↑	Last Seen	Status	Tank	Firmware Version	Last Fog
	black/ white unit	Now	Idle		26	6/27/2024, 12:15 PM
	Conf room biopure	Now	Idle		26	6/25/2024, 8:00 PM

Tank Level


21 Jun 22 Jun 23 Jun 24 Jun 25 Jun 26 Jun 27 Jun 28 Jun

● black/ white unit ● Conf room biopure



Setup notifications - optional

1. If email or SMS notifications are desired, navigate to the Profile page to enable the appropriate notifications.

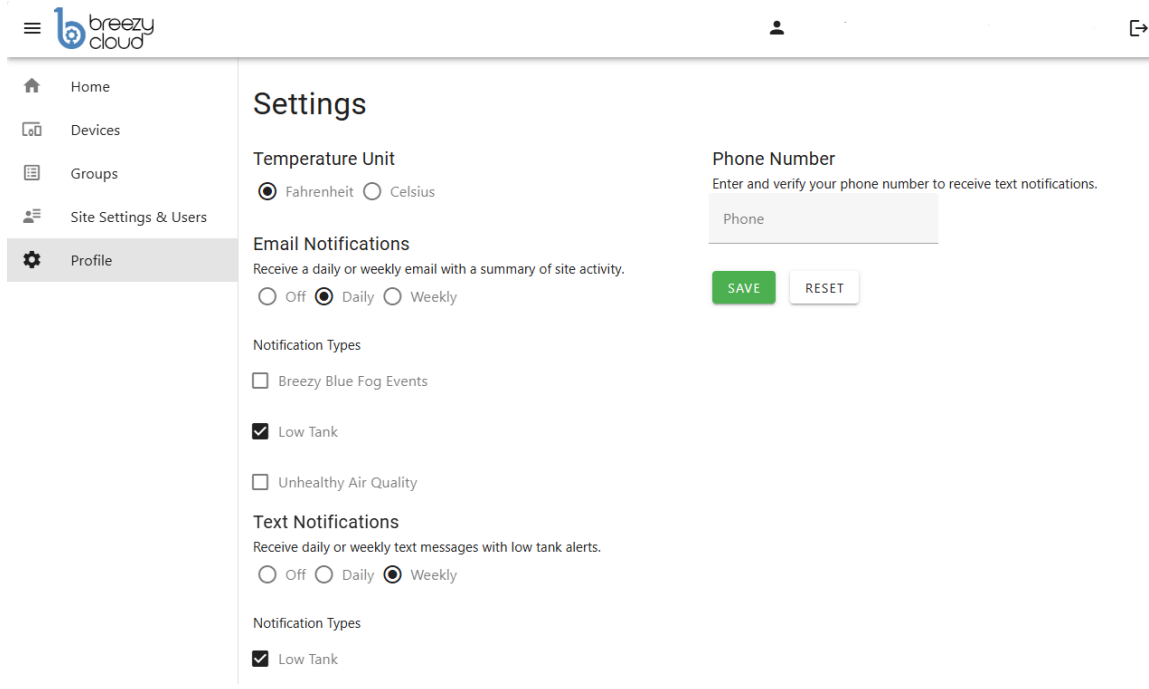

The screenshot shows the Breezy Cloud web interface. On the left is a sidebar with navigation links: Home, Devices, Groups, Site Settings & Users, and Profile (which is highlighted). The main content area is titled 'Settings'. It contains three sections: 'Temperature Unit' with radio buttons for Fahrenheit (selected) and Celsius; 'Email Notifications' with a description 'Receive a daily or weekly email with a summary of site activity.' and radio buttons for Off, Daily (selected), and Weekly; and 'Text Notifications' with a description 'Receive daily or weekly text messages with low tank alerts.' and radio buttons for Off, Daily, and Weekly (selected). Below these are checkboxes for 'Notification Types': Breezy Blue Fog Events, Low Tank (checked), and Unhealthy Air Quality. On the right side of the settings area, there is a 'Phone Number' section with the instruction 'Enter and verify your phone number to receive text notifications.' and a text input field labeled 'Phone'. Below the input field are 'SAVE' and 'RESET' buttons.

Add other Breezy devices to site

1. Other Breezy devices such as Breezy Sense can be added to the site and groups in a similar manner to Breezy Blue.



Regulatory information

FCC ID: 2AUXBDSGW-091

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Class B device notice. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF exposure safety. This product is a radio transmitter and receiver. It is designed not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission. The antenna must be installed and operated with a minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



LIMITED WARRANTY (USA/CANADA)

Build With Robots warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of shipment. If any such product proves defective during this warranty period, Build With Robots, at its option, either will repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product. Parts, modules and replacement products used by Build With Robots for warranty work may be new or reconditioned to like new performance. All replaced parts, modules and products become the property of Build With Robots.

In order to obtain service under this warranty, Customer must notify Build With Robots of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. Customer shall be responsible for packaging and shipping the defective product to the service center designated by Build With Robots, with shipping charges prepaid. Build With Robots shall pay for the return of the product to Customer if the shipment is to a location within the country in which the Build With Robots service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. Build With Robots shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than Build With Robots representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; c) to repair any damage or malfunction caused by the use of non-Build With Robots supplies; or d) to service a product that has been modified or integrated with other products.

THIS WARRANTY IS GIVEN BY BUILD WITH ROBOTS WITH RESPECT TO THE PRODUCT IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. BUILD WITH ROBOTS AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BUILD WITH ROBOTS' RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR BREACH OF THIS WARRANTY. BUILD WITH ROBOTS AND ITS VENDORS WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER BUILD WITH ROBOTS OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

